



1. External Parts

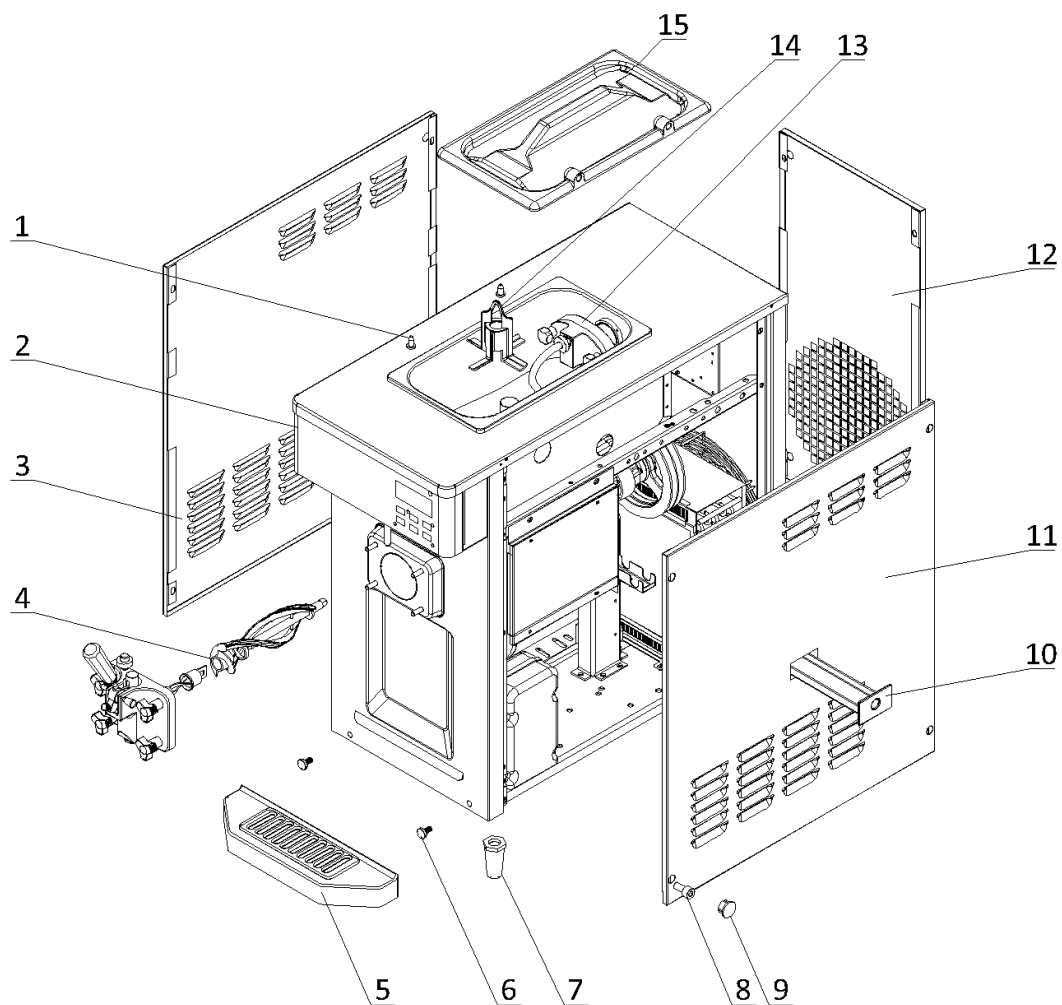

1. External Parts

Item	Part Number	Description	Qty.
1	3.6.39.011	Hopper Lid Holder	2
2	Page 6	Draw Switch and Front Control	1
3	2.3.4.28.029	Panel - Left	1
4	Page 5	Dispensing Door and Beater	1
5	3.4.04.01.013	Front Drip Tray	1
6	3.6.39.004	Drip Tray Mounting Bolt	2
7	3.3.05.03.002	Leg	4
8	3.6.11.041	Panel Screw	12
9	3.4.07.01.041	Bolt Hole Cover	12
10	3.4.04.02.002	Internal Drip Tray	1
11	2.3.4.30.027	Panel - Right	1
12	2.3.4.23.074	Panel - Rear	1
13	Page 7	Air Pump Assembly	1
14	Page 8	Hopper Agitator	1
15	3.4.03.01.007	Hopper Lid	1


2. Internal Parts

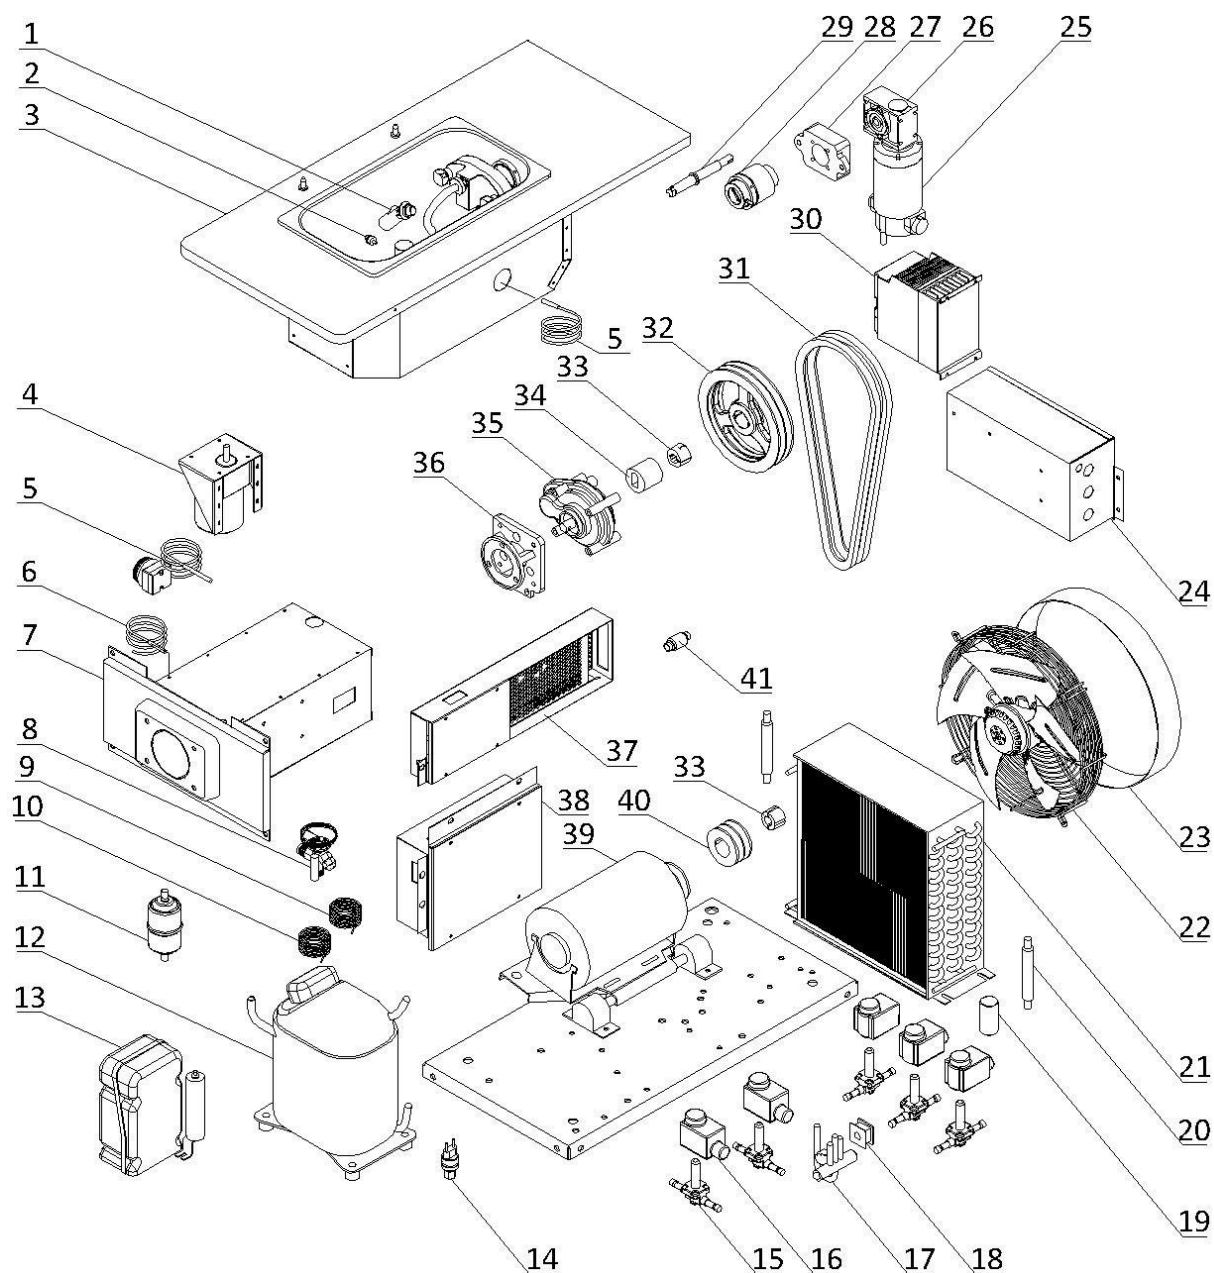

2. Internal Parts


Item	Part Number	Description	Qty.
1	3.1.03.04.009	Mix Low Sensor	1
2	2.1.3.50.0060	Mix Low Sensor - Steel	1
3	2.1.1.05.0125	Hopper Assembly	1
4	Page 8	Agitator Motor Assembly	1
5	3.1.01.07.011	Thermostat	1
6	3.1.02.13.020	Temperature Probe - PT100	2
7	2.1.1.06.0181	Cylinder Assembly	1
8	3.2.04.01.012	Thermal Expansion Valve	1
9	3.2.05.01.002	Capillary Tube - 2x0.7	1
10	3.2.05.01.008	Capillary Tube - 2.07x1.07	1
11	3.2.04.05.002	Filter Drier	1
12	3.2.01.02.040	Primary Compressor	1
13	3.2.01.04.019	Start Component - Primary Compressor	1
14	3.2.04.06.004	High Pressure Switch	1
15	3.2.04.04.004	Solenoid Valve Body	5
16	3.2.04.04.020	Solenoid Coil	5
17	3.2.04.04.057	Four-way Valve Body	1
18	3.2.04.04.056	Four-way Valve Coil	1
19	3.2.03.04.005-2	Capacitor - Fan Motor	1
20	3.2.05.05.011	One-way Valve	1
21	3.2.02.01.022	Main Condenser	1
22	3.2.03.04.005	Fan Motor	1
23	2.1.3.50.0001	Fan Shroud	1
24	Page 9	Electrical Box	1
25	3.3.01.01.033	Motor - Air Pump	1
26	3.3.02.01.018	Gear Box - FCNDK	1
27	2.1.4.01.062	Bracket - Motor - Air Pump	1
28	2.1.4.01.084	Air Pump Seat Assembly	1
29	2.1.4.01.061	Shaft - Air Pump	1
30	3.1.01.08.019	Inverter	1
31	3.3.03.01.002	Belt - Motor to Beater	2
32	3.3.04.02.007	Pulley - SPA182X2	1
33	3.3.04.01.005	Bushing - 1008-16	1
34	3.3.02.03.004	Coupling Drive	1
35	3.3.02.01.026	Gear Box - 45*20 Shaft	1
36	2.1.3.15.0009	Bracket - Gear Box	1
37	Page 10	Power Box	1
38	Page 10	Control Box	1
39	3.3.01.04.005	Motor - Beater	1
40	3.3.04.02.001	Pulley - SPA63X2	1
41	3.2.04.05.013	Copper Strainer Filter	1

3. Dispensing Door and Beater

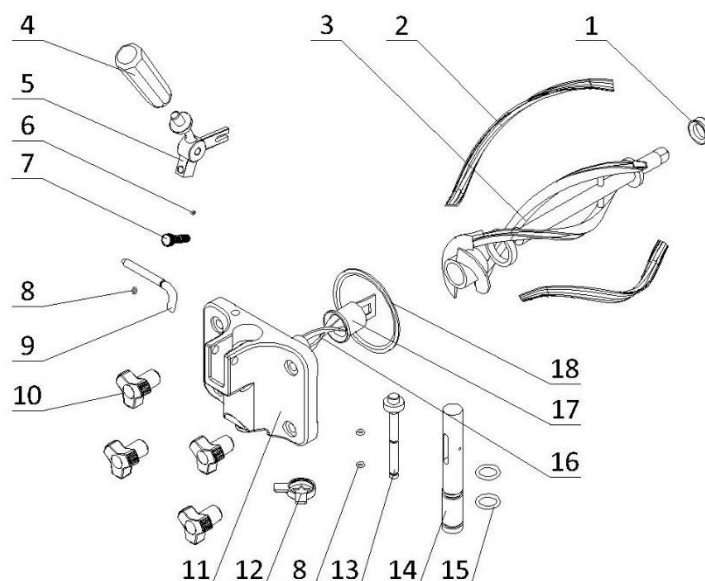


Item	Part Number	Description	Qty.
1	3.4.07.05.003	Gasket - Beater	1
2	3.4.02.02.009	Double Helix Beater	1
3	2.1.1.25.0016	Helix Beater Blade	2
4	3.4.05.01.001	Seat - Handle	1
5	2.1.3.26.0004	Handle - Dispensing	1
6	3.4.08.01.012	O-Ring - 3x1.5	1
7	3.6.39.008	Adjustment Screw - Handle	1
8	3.4.08.01.013	O-Ring - 5.2x1.9	3
9	2.1.3.27.0026	Retention Pin - Handle	1
10	3.4.05.02.012	Hand Screw - Dispensing	4
11	2.1.3.14.0030	Dispensing Door	1
12	3.4.05.03.001	Design Cap	1
13	2.1.3.02.0016	Prime Plug	1
14	2.1.1.40.0020	Draw Valve	1
15	3.4.08.01.006	O-Ring - 16.8x2.4	2
16	2.1.1.11.0014	Beater Rod	1
17	3.4.01.03.013	Beater Guide	1
18	3.4.08.02.007	Door Gasket	1

4. Draw Switch and Front Control Panel

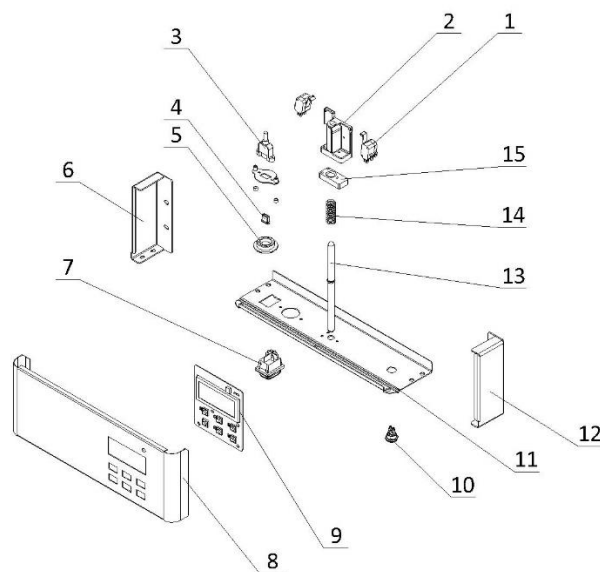


Item	Part Number	Description	Qty.
1	3.1.03.01.003	Draw Switch - KW-7-2 II	2
2	3.4.07.07.009	Bracket - Micro Switch & Shaft & Spring - Center	1
3	3.1.02.21.014	Cable - Flash Drive	1
4	3.1.02.21.019	Flash Drive	1
5	3.4.07.06.010	Cover - Flash Drive	1
6	2.3.4.37.003	Panel - Overhead Left	1
7	3.1.03.03.003	Power Switch	1
8	2.3.4.33.032	Panel - Overhead Front	1
9	2.2.1.01.0027	Display Board	1
10	3.1.03.04.046	Reset Button	1
11	2.3.4.39.054	Panel - Overhead Bottom	1
12	2.3.4.38.003	Panel - Overhead Right	1
13	2.1.3.50.0085	Shaft - Draw Switch	1
14	3.6.03.012	Spring - Shaft - Draw Switch	1
15	3.4.07.07.010	Spacer - Bracket - Draw Switch	1

5. Air Pump

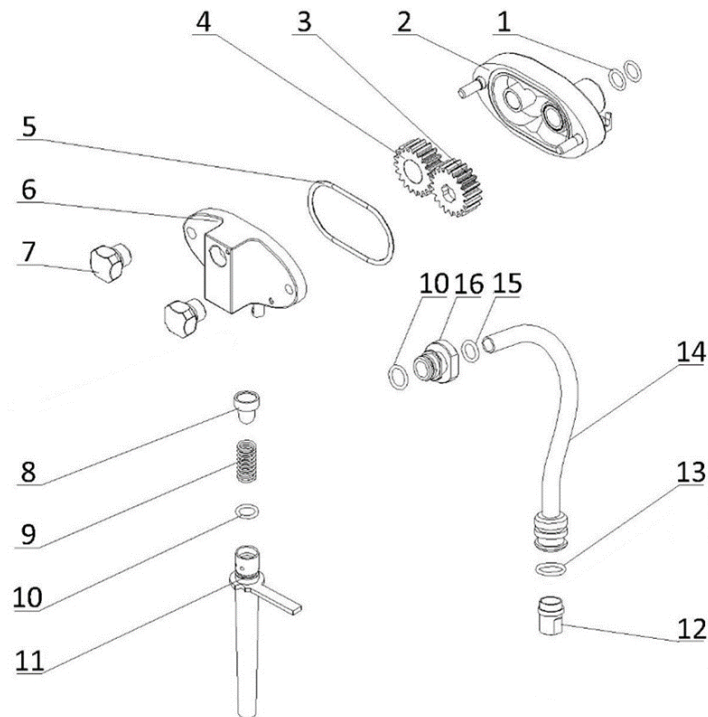


Item	Part Number	Description	Qty.
1	3.4.08.01.025	O-Ring - 15.8x2.4	2
2	2.1.4.01.004	Shell Rear - Air Pump	1
3	2.1.4.01.013	Driving Gear - Air Pump	1
4	2.1.4.01.012	Driven Gear - Air Pump	1
5	3.4.08.01.041	Seal - 71.8x3	1
6	2.1.4.01.003	Shell Front - Air Pump	1
7	2.1.4.01.077	Hand Screw - Air Pump	2
8	3.4.07.06.003	Plug - Suction Tube	1
9	3.6.03.018	Spring - Suction Tube	1
10	3.4.08.01.003	O-Ring - 13.5x2.5	1
11	2.1.4.01.095	Suction Tube - Air Pump	1
12	2.1.4.01.092	Connector - Lower/ Hopper	1
13	3.4.08.01.006	O-Ring - 16.8x2.4	1
14	2.1.4.01.019	Injection Tube - Air Pump	1
15	3.4.08.01.008	O-Ring - 11.5x2.5	1
16	2.1.4.01.087	Connector - Upper/ Pump	1

6. Hopper Agitator

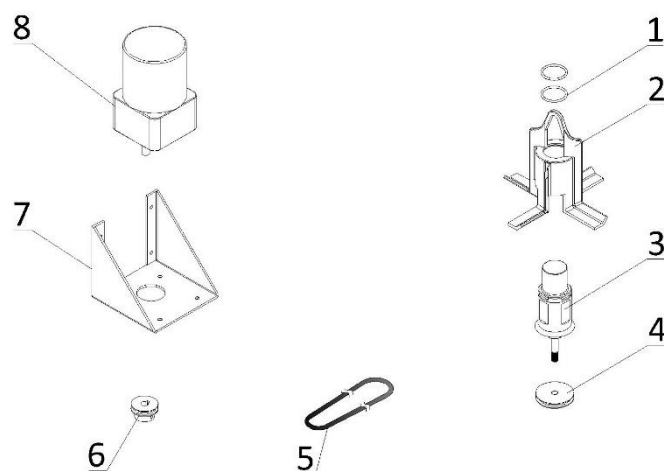


Item	Part Number	Description	Qty.
1	3.4.08.01.034	O-Ring - 31×2	2
2	2.1.1.23.0005	Blade - Hopper Agitator	1
3	2.1.1.12.0001	Agitator Assembly	1
4	2.1.4.02.017	Pulley - Hopper Agitator - Driven	1
5	2.1.4.08.006	Belt - Hopper Agitator	1
6	3.3.04.04.008	Pulley - Hopper Agitator - Drive	1
7	2.3.4.45.407	Bracket - Agitator Motor	1
8	3.3.01.01.006	Motor - Agitator	1

7. Electrical Box

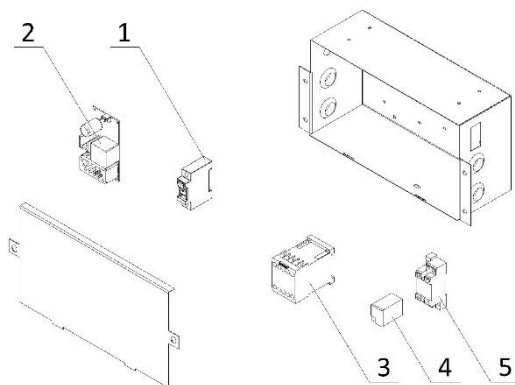


Item	Part Number	Description	Qty.
1	3.1.02.08.017	Seat - Fuse	1
	3.1.02.08.019	Fuse	2
2	3.1.01.05.032	Power Supply - RPD-5V/24V	1
3	3.1.01.01.010	Contactor	1
4	3.1.01.03.034	Intermediate Relay	1
5	3.1.01.03.021	Base - Relay	1

8. Power Box

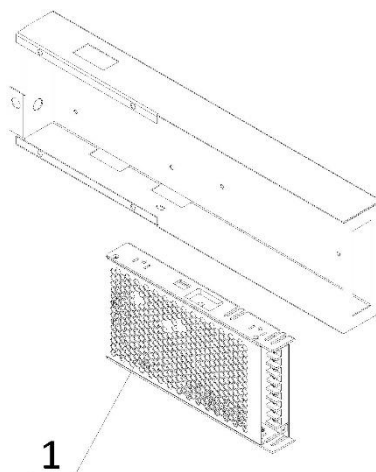

Item	Part Number	Description	Qty.
1	3.1.01.05.019	Power Supply - LRS-200-24	1

9. Control Box

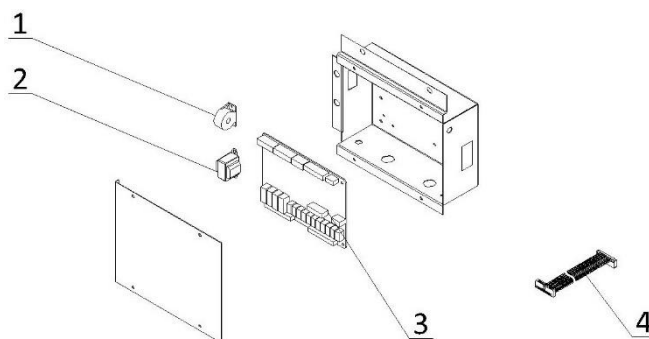

Item	Part Number	Description	Qty.
1	3.1.02.10.046	Current Transformer	1
2	3.1.01.04.013	Transformer	1
3	2.2.1.01.0034	Power Control Board	1
4	3.1.04.01.007	Ribbon Cable - 30 pin	1