



## 1. External Parts

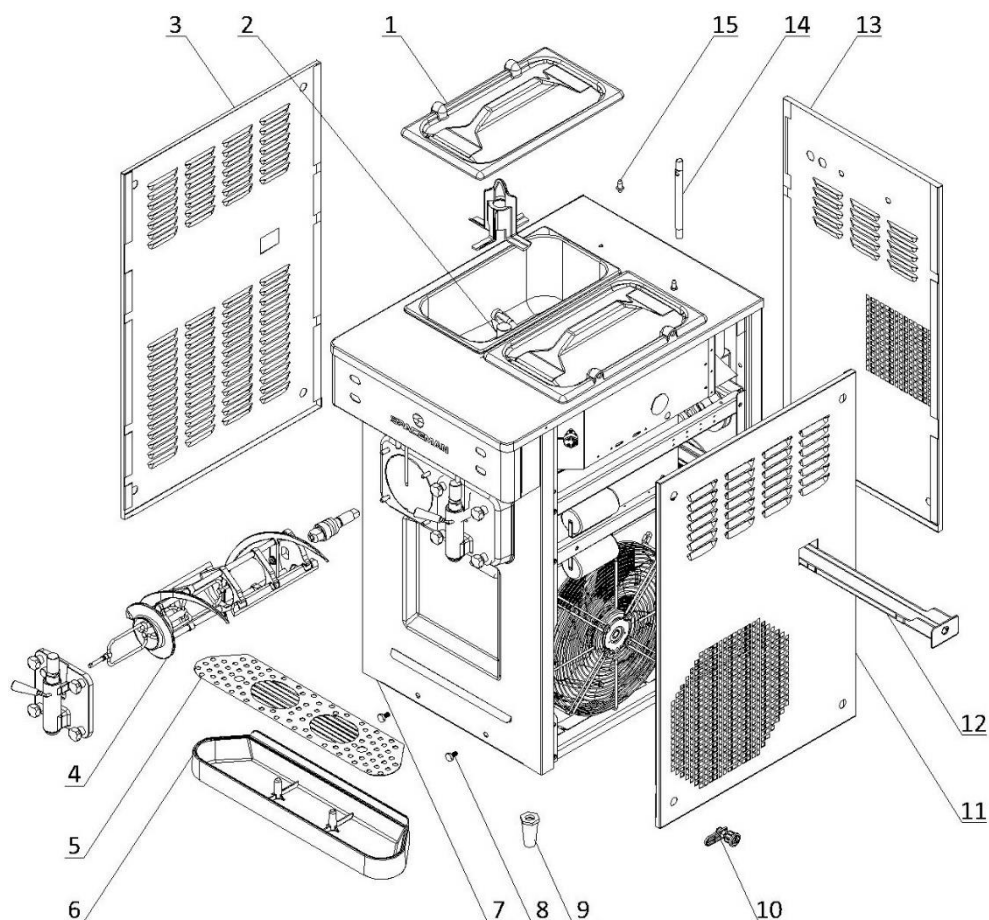

## 1. External Parts


| Item      | Part Number   | Description                     | Qty. |
|-----------|---------------|---------------------------------|------|
| <b>1</b>  | 3.4.03.01.004 | Hopper Lid                      | 2    |
| <b>2</b>  | Page 7        | Hopper Agitator                 | 2    |
| <b>3</b>  | 2.3.4.28.052  | Panel - Left                    | 1    |
| <b>4</b>  | Page 5        | Dispensing Door and Beater      | 2    |
| <b>5</b>  | 2.3.4.45.304  | Splash Shield - Front Drip Tray | 1    |
| <b>6</b>  | 3.4.04.01.010 | Front Drip Tray                 | 1    |
| <b>7</b>  | 2.3.4.26.049  | Panel - Lower Front             | 1    |
| <b>8</b>  | 3.6.39.004    | Drip Tray Mounting Bolt         | 2    |
| <b>9</b>  | 3.3.05.03.005 | Leg                             | 4    |
| <b>10</b> | 8.1.07.001    | Panel Lock Assembly             | 12   |
| <b>11</b> | 2.3.4.30.046  | Panel - Right                   | 1    |
| <b>12</b> | 3.4.04.02.001 | Internal Drip Tray              | 1    |
| <b>13</b> | 2.3.4.23.069  | Panel - Rear                    | 1    |
| <b>14</b> | 2.1.3.39.0006 | Air Tube                        | 2    |
| <b>15</b> | 3.6.39.011    | Hopper Lid Holder               | 2    |

## 2. Internal Parts

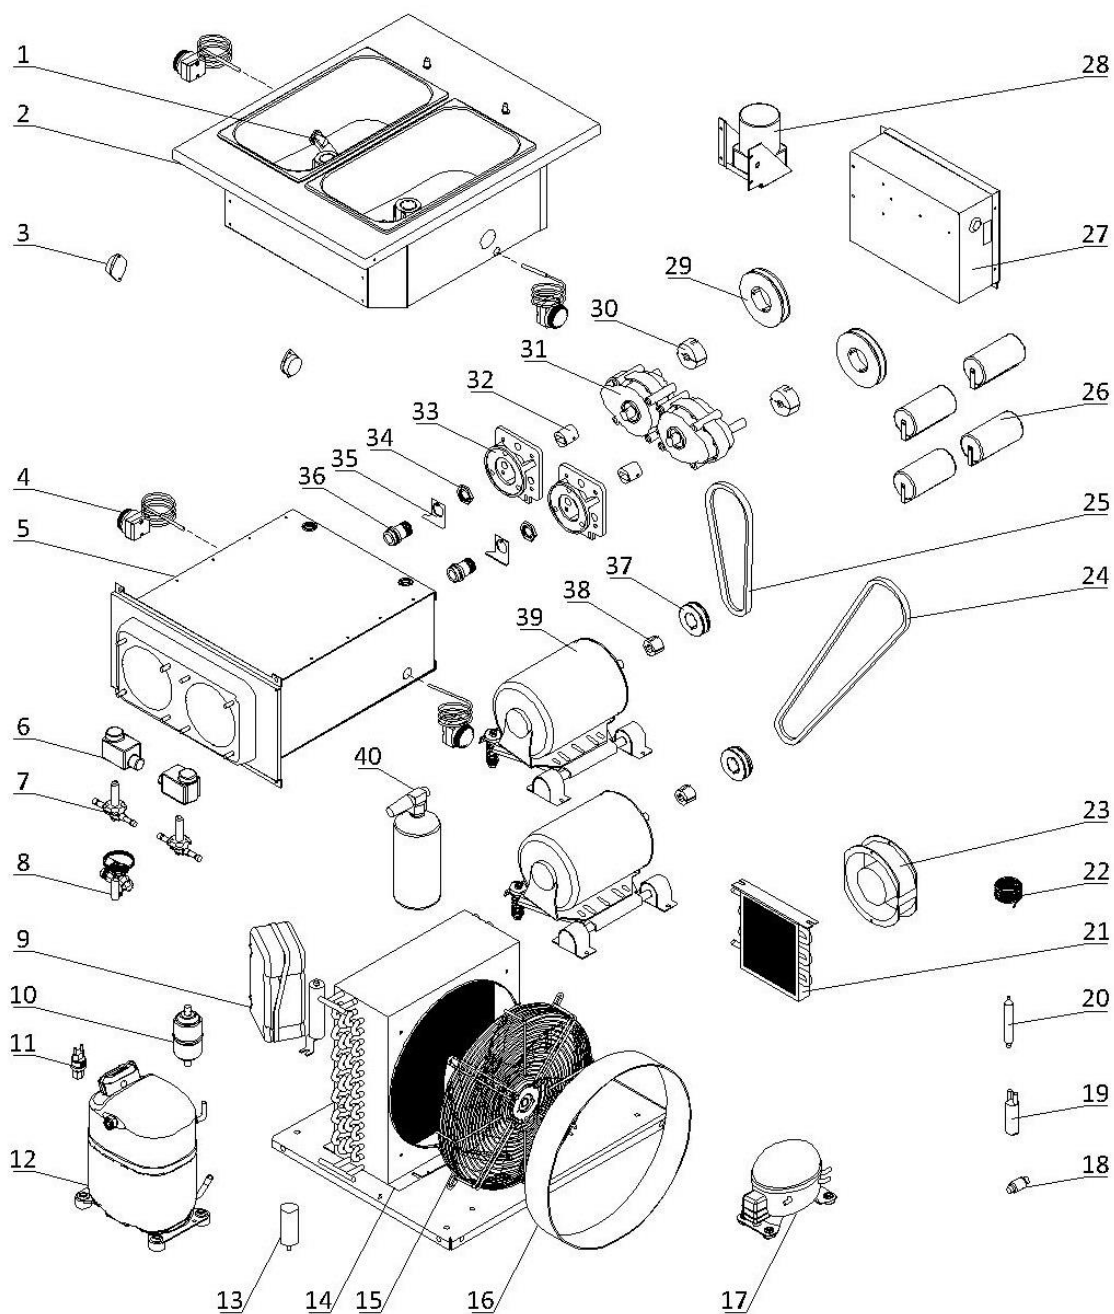


| Item | Part Number     | Description                          | Qty. |
|------|-----------------|--------------------------------------|------|
| 1    | 3.1.03.04.009   | Mix Low Sensor                       | 2    |
| 2    | 2.1.1.03.0053   | Hopper Assembly                      | 1    |
| 3    | 3.1.02.15.003   | Alarm - Low Mix                      | 2    |
| 4    | 3.1.01.07.003   | Thermostat                           | 4    |
| 5    | 2.1.1.06.0140   | Cylinder Assembly                    | 1    |
| 6    | 3.2.04.04.015   | Solenoid Coil                        | 2    |
| 7    | 3.2.04.04.002   | Solenoid Valve Body                  | 2    |
| 8    | 3.2.04.01.001   | Expansion Valve                      | 1    |
| 9    | 3.2.01.04.019   | Start Component - Primary Compressor | 1    |
| 10   | 3.2.04.05.002   | Filter Drier - Cylinder              | 1    |
| 11   | 3.2.04.06.005   | High Pressure Switch                 | 1    |
| 12   | 3.2.01.02.040   | Primary Compressor                   | 1    |
| 13   | 3.2.03.03.004-2 | Capacitor - Fan Motor                | 1    |
| 14   | 3.2.02.01.007   | Main Condenser                       | 1    |
| 15   | 3.2.03.03.004   | Fan Motor                            | 1    |
| 16   | 2.1.3.50.0002   | Fan Shroud                           | 1    |
| 17   | 3.2.01.01.008   | Auxiliary Compressor                 | 1    |
| 18   | 3.2.04.05.013   | Copper Strainer Filter               | 1    |
| 19   | 3.2.04.07.001   | Suction Accumulator                  | 1    |
| 20   | 3.2.04.05.001   | Filter Drier - Hopper                | 1    |
| 21   | 3.2.02.01.001   | Auxiliary Condenser                  | 1    |
| 22   | 3.2.05.01.003   | Capillary Tube                       | 1    |
| 23   | 3.2.03.01.005   | Fan Motor                            | 1    |
| 24   | 3.3.03.03.019   | Belt - Motor to Beater - A1245       | 1    |
| 25   | 3.3.03.03.015   | Belt - Motor to Beater - A660        | 1    |
| 26   | 3.3.01.03.003-1 | Capacitor - Motor - Beater           | 2    |
| 27   | Page 8          | Electrical and Power Control Box     | 1    |
| 28   | Page 7          | Agitator Motor Assembly              | 1    |
| 29   | 3.3.04.02.006   | Pulley - Gear Box                    | 2    |
| 30   | 3.3.04.01.008   | Bushing - 1610-16                    | 2    |
| 31   | 3.3.02.01.024   | Gear Box                             | 2    |
| 32   | 3.3.02.04.009   | Coupling Drive                       | 2    |
| 33   | 2.1.3.15.0003   | Bracket - Gear Box                   | 2    |
| 34   | 3.3.02.02.010   | Nut - Rear Shell Bearing             | 2    |
| 35   | 2.3.6.04.004    | Lock Plate - Rear Shell Bearing      | 2    |
| 36   | 3.3.02.02.002   | Rear Shell Bearing                   | 2    |
| 37   | 3.3.04.02.012   | Pulley - Beater Motor                | 2    |
| 38   | 3.3.04.01.005   | Bushing - 1008-16                    | 2    |
| 39   | 3.3.01.03.003   | Motor - Beater                       | 2    |
| 40   | 3.2.04.08.001   | liquid Receiver                      | 1    |

## 3. Dispensing Door and Beater

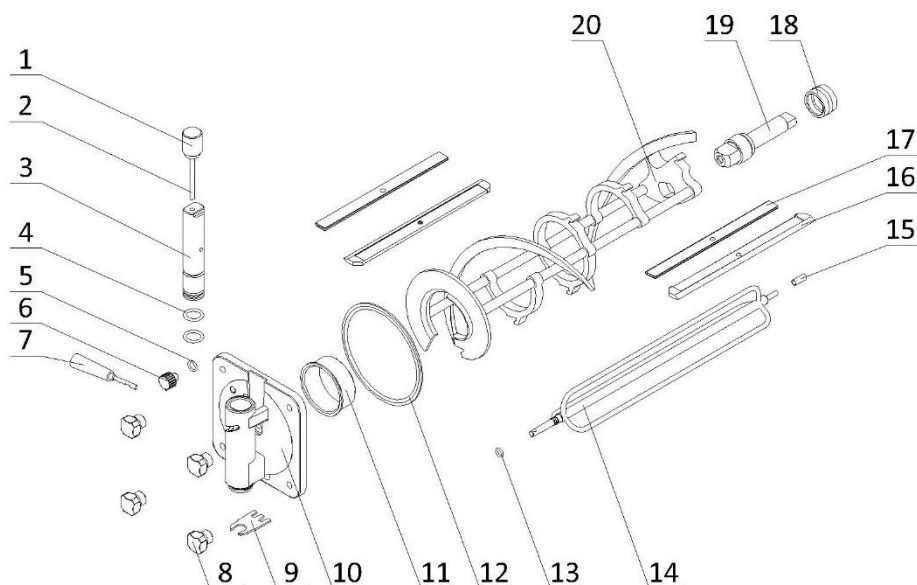


| Item | Part Number   | Description             | Qty. |
|------|---------------|-------------------------|------|
| 1    | 2.1.3.36.0004 | Weight - Draw Valve     | 2    |
| 2    | 2.1.3.36.0003 | Pin - Draw Valve        | 2    |
| 3    | 2.1.3.01.0006 | Draw Valve              | 2    |
| 4    | 3.4.08.01.036 | O-Ring - 19x3.55        | 4    |
| 5    | 3.4.08.01.008 | O-Ring - 11.5x2.5       | 2    |
| 6    | 3.4.07.08.001 | Prime Plug              | 2    |
| 7    | 3.4.05.01.002 | Handle - Dispensing     | 2    |
| 8    | 2.1.3.32.0004 | Hand Screw - Dispensing | 8    |
| 9    | 2.1.4.04.014  | Ice Buster - Dispensing | 2    |
| 10   | 2.1.3.14.0006 | Dispensing Door         | 2    |
| 11   | 3.4.01.03.003 | Beater Guide            | 2    |
| 12   | 3.4.08.02.012 | Door Gasket             | 2    |
| 13   | 3.4.08.01.017 | O-Ring - 11x2.4         | 2    |
| 14   | 2.1.1.31.0001 | Torque Rotor            | 2    |
| 15   | 3.4.01.03.004 | Torque Guide            | 2    |
| 16   | 3.4.02.01.003 | Plastic - Scraper Blade | 4    |
| 17   | 2.3.4.04.003  | Clip - Scraper Blade    | 4    |
| 18   | 3.4.07.05.002 | Gasket - Drive Shaft    | 2    |
| 19   | 2.1.3.25.0003 | Drive Shaft             | 2    |
| 20   | 2.1.1.10.0004 | Beater - FB - Standard  | 2    |

## 4. Draw Switch and Front Control Panel

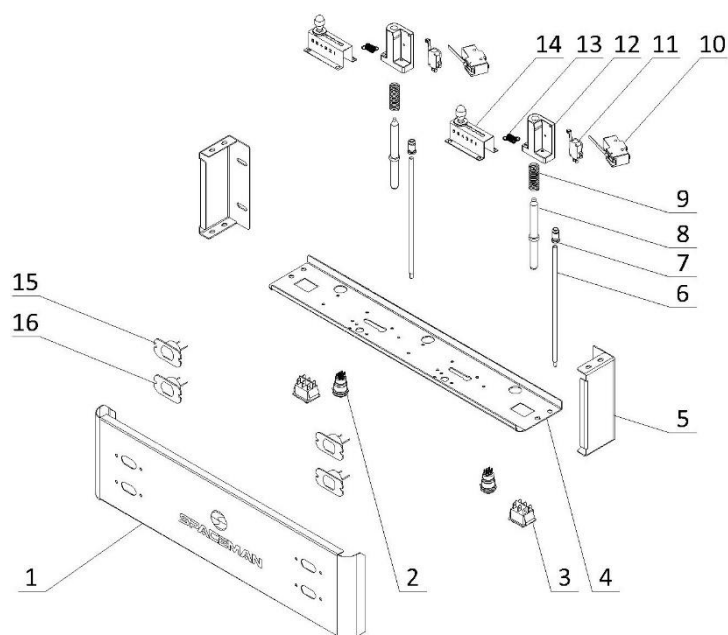


| Item | Part Number   | Description                             | Qty. |
|------|---------------|-----------------------------------------|------|
| 1    | 2.3.4.36.039  | Panel - Overhead Front                  | 1    |
| 2    | 3.1.03.04.039 | Switch - Standby                        | 2    |
| 3    | 3.1.03.03.002 | Power Switch                            | 2    |
| 4    | 2.3.4.39.074  | Panel - Overhead Bottom                 | 1    |
| 5    | 2.3.4.37.059  | Panel - Overhead Side                   | 2    |
| 6    | 2.1.4.04.025  | Torque Arm                              | 2    |
| 7    | 2.1.4.04.024  | Bracket - Spring                        | 2    |
| 8    | 2.1.3.50.0088 | Shaft - Draw Switch                     | 2    |
| 9    | 3.6.03.012    | Spring - Shaft - Draw Switch            | 2    |
| 10   | 3.1.03.02.002 | Micro Switch - Torque Lever             | 2    |
| 11   | 3.1.03.01.002 | Micro Switch - KW-7-2                   | 2    |
| 12   | 3.4.07.06.008 | Bracket - Micro Switch & Shaft & Spring | 2    |
| 13   | 3.6.02.003    | Spring - Viscosity                      | 2    |
| 14   | 920.1.03.0004 | Control Levers - Viscosity Adjustment   | 2    |
| 15   | 3.1.02.14.013 | LED Light - Red                         | 2    |
| 16   | 3.1.02.14.011 | LED Light - Blue                        | 2    |

## 5. Hopper Agitator

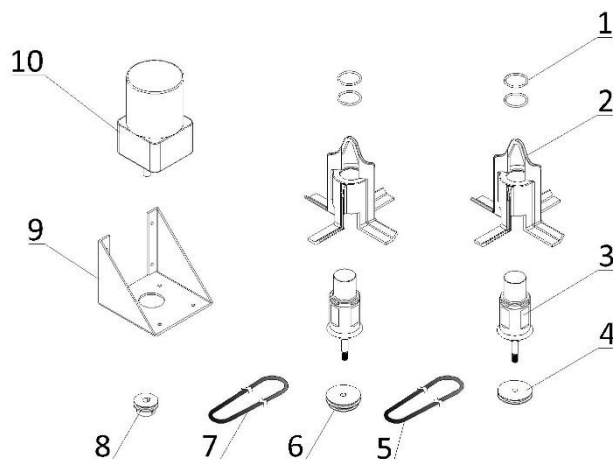

| Item | Part Number   | Description                       | Qty. |
|------|---------------|-----------------------------------|------|
| 1    | 3.4.08.01.034 | O-Ring - 31×2                     | 4    |
| 2    | 2.1.1.23.0005 | Blade - Hopper Agitator           | 2    |
| 3    | 2.1.1.12.0011 | Agitator Assembly                 | 2    |
| 4    | 2.1.4.02.015  | Pulley - Hopper Agitator - Single | 1    |
| 5    | 2.1.4.08.006  | Belt - Hopper Agitator            | 1    |
| 6    | 2.1.4.02.016  | Pulley - Hopper Agitator - Double | 1    |
| 7    | 2.1.4.08.006  | Belt - Hopper Agitator            | 1    |
| 8    | 3.3.04.04.008 | Pulley - Hopper Agitator - Drive  | 1    |
| 9    | 2.3.4.45.339  | Bracket - Agitator Motor          | 1    |
| 10   | 3.3.01.01.006 | Motor - Agitator                  | 1    |

## 6. Electrical and Power Control Box

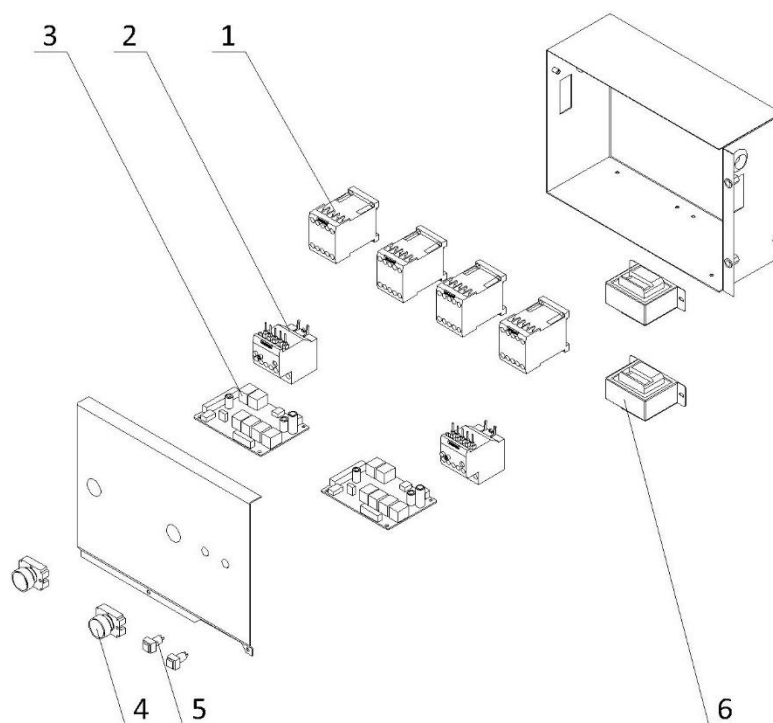

| Ite | Part Number   | Description            | Qty. |
|-----|---------------|------------------------|------|
| 1   | 3.1.01.01.010 | Contactor              | 4    |
| 2   | 3.1.01.02.010 | Thermal Overload Relay | 2    |
| 3   | 2.2.1.01.0038 | Control Board - FB     | 2    |
| 4   | 3.1.03.04.002 | Reset Button           | 2    |
| 5   | 3.1.03.04.003 | Switch - Low Mix Alarm | 2    |
| 6   | 3.1.01.04.002 | Transformer            | 2    |