


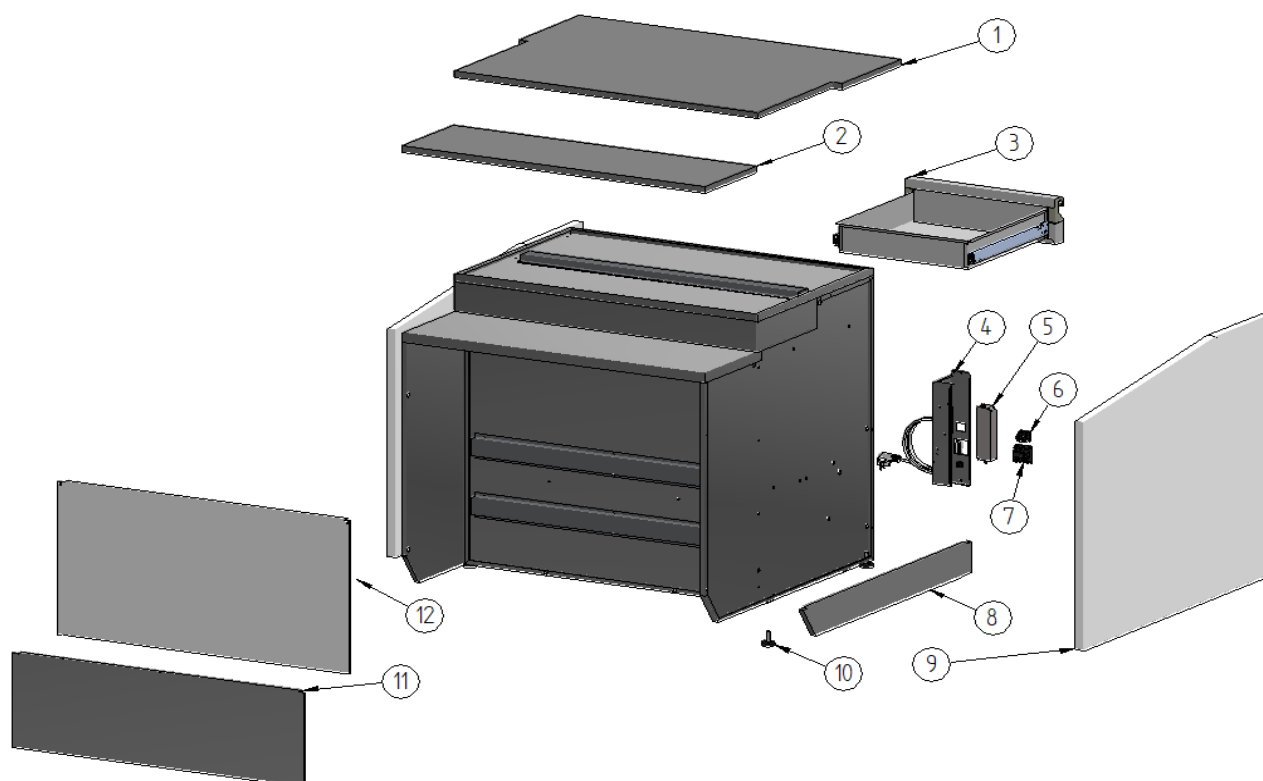

Nº	DESCRIPCIÓN	DESCRIPTION	MCVEG-10-10-DIS
1	ENCIMERA SUPERIOR	UPPER WORKTOP	630100150
2	ENCIMERA INFERIOR	LOWER WORKTOP	630100149
3	CAJON	DRAWER	622101493
4	PANEL DE CONTROL	CONTROL PANEL	9FESA14089B.PLE
5	FUENTE DE ALIMENTACION	LED DRIVER	212900182
6	INTERRUPTOR GENERAL (ÁMBAR)	GENERAL SWITCH (AMBER)	211300001
7	ENCHUFE SCHUKO	SCHUKO SOCKET	211700002
8-A	DECORACION DERECHO CHASIS	RIGHTSIDE CHASSIS DECORATION	9HIPL14129A.PLE
8-B	DECORACION IZQUIERDO CHASIS	LEFTSIDE CHASSIS DECORATION	9HIPL14130A.PLE
9-A	COSTADO IZQUIERDO	LEFT SIDE	610101034
9-B	COSTADO DERECHO	RIGHT SIDE	610101035
10	REGULADOR	FEET	342500002
11	DECORACIÓN INFERIOR	LOWSIDE DECORATION	9INSA14606A.PLE
12	DECORACION SUPERIOR	UPSIDE DECORATION	9HIPL14605A.PLE