
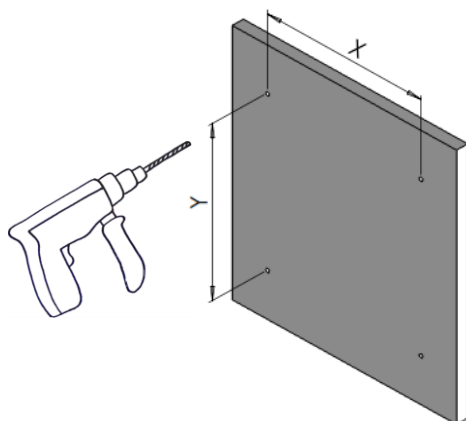



MONTAJE SOPORTE PARED SALAMANDRA

ASSEMBLY WALL SUPPORT FOR SALAMANDER


MODELO	DIMENSIONES	COTA X	COTA Y
SME400	400x475x510	342	354
SMETRIF400	400x475x510	342	354
SME600	600x475x510	542	354
SMETRIF600	600x475x510	542	354

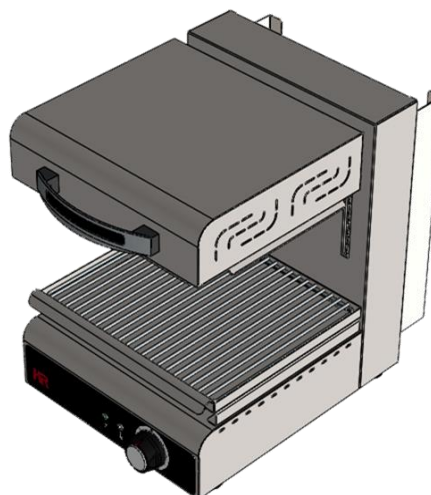


1. Hacer taladros según modelo (tabla superior).
Introducir tacos 4 x M8 (no incluidos).
Make the holes according to the model (top table).
Insert studs 4 x M8 (not included).

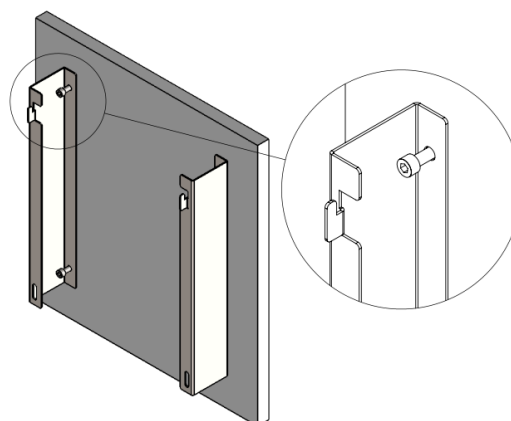

2. Atornillar ambos soportes a la pared.
Screw the supports to the wall.

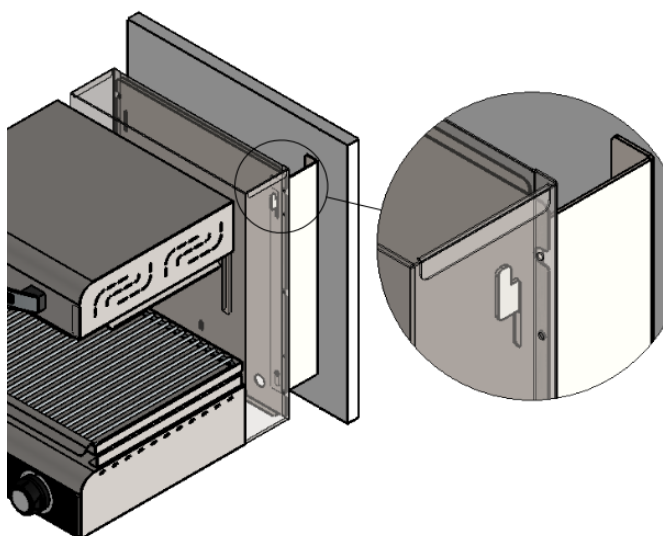

3. Introducir las pestañas superiores de ambos soportes en las ranuras traseras.
Insert the upper flanges of the supports into the rear slots.

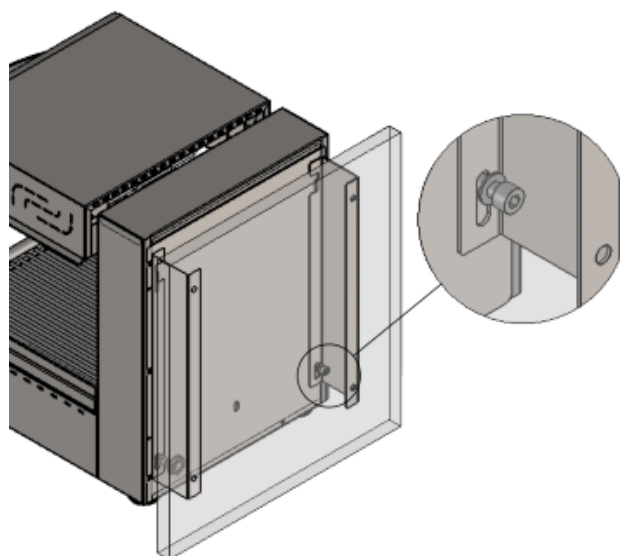

4. Atornillar ambos soportes a la salamandra en la parte inferior.
Screw the lower part of the supports to the salamander.