



1. External Parts

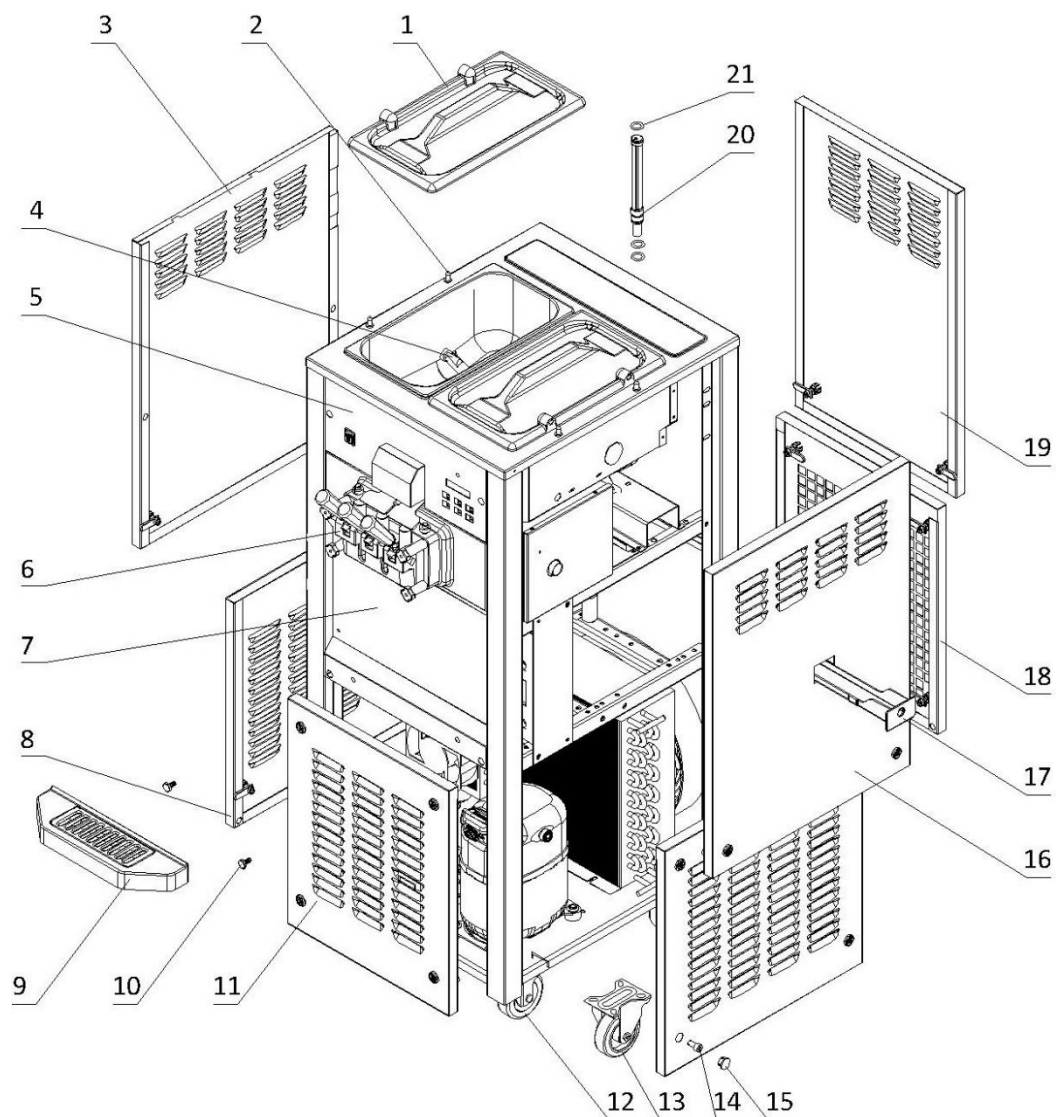

1. External Parts

Item	Part Number	Description	Qty.
1	3.4.03.01.004	Hopper Lid	2
2	3.6.39.011	Hopper Lid Holder	4
3	2.3.4.29.001	Panel - Upper Left	1
4	3.1.03.04.009	Mix Low Sensor	2
5	Page 6	Draw Switch and Front Control Panel	1
6	Page 5	Dispensing Door and Beater	1
7	2.3.4.26.002	Panel - Middle Front	1
8	2.3.4.32.001	Panel - Lower Left & Right	2
9	3.4.04.01.013	Front Drip Tray	1
10	3.6.39.004	Drip Tray Mounting Bolt	2
11	2.3.4.27.002	Panel - Lower Front	1
12	3.3.05.02.005	Caster - Swivel	2
13	3.3.05.01.005	Caster - Fixed	2
14	3.6.11.041	Panel Screw	18
15	3.4.07.01.041	Bolt Hole Cover	18
16	2.3.4.31.001	Panel - Upper Right	1
17	3.4.04.02.001	Internal Drip Tray	1
18	2.3.4.25.001	Panel - Lower Rear	1
19	2.3.4.24.001	Panel - Upper Rear	1
20	2.1.3.39.0011	Air Tube	2
21	3.4.08.01.002	O-Ring - 18x2.2	6


2. Internal Parts

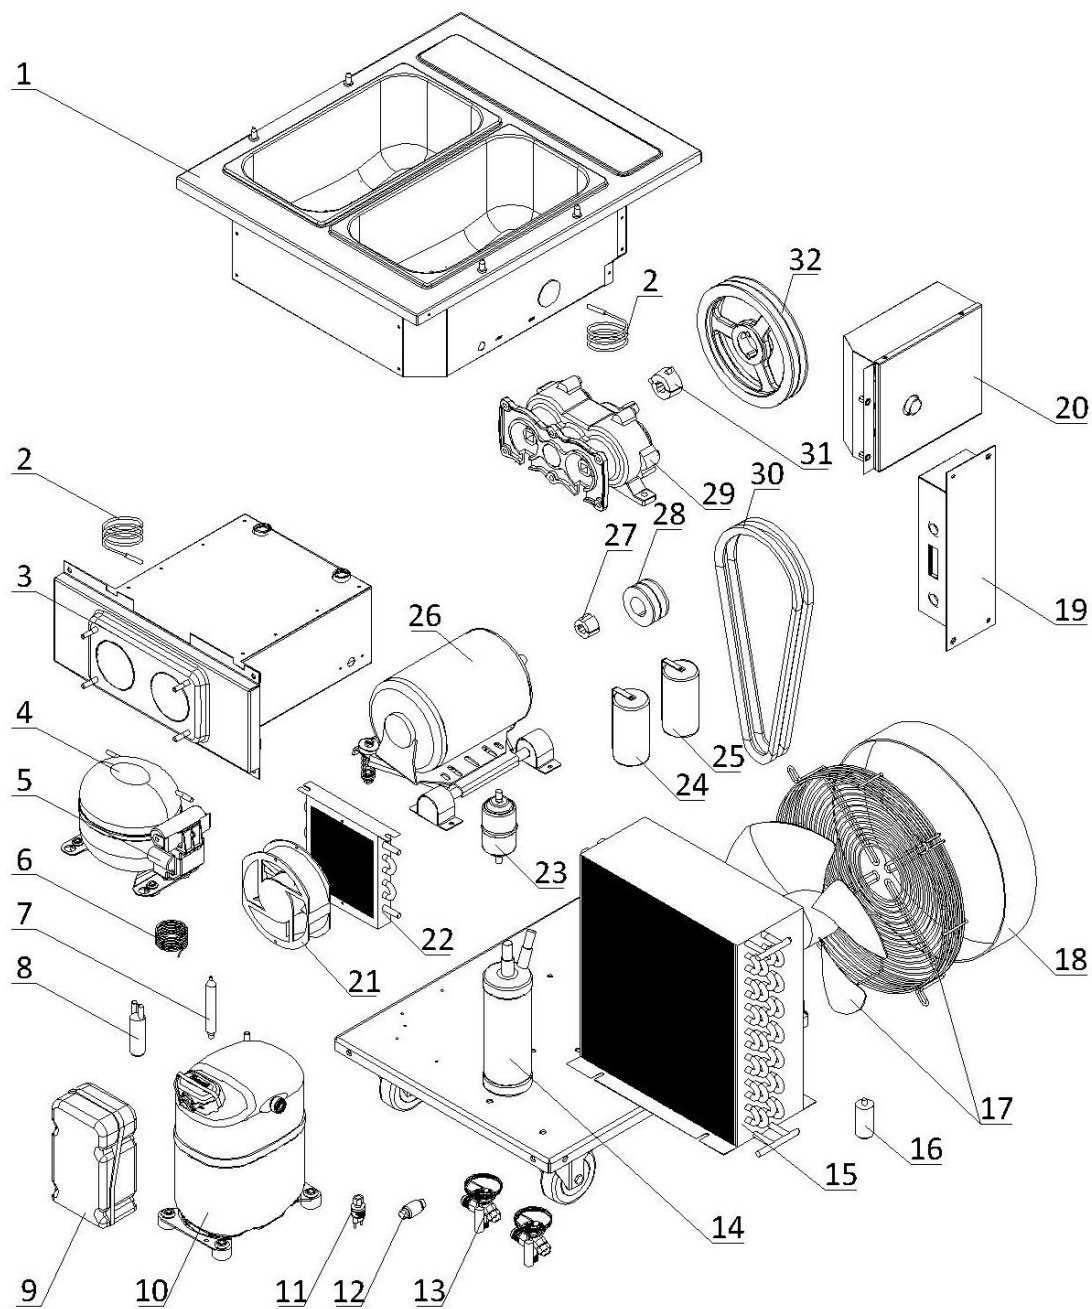

2. Internal Parts


Item	Part Number	Description	Qty.
1	2.1.1.02.0055	Hopper Assembly	1
2	3.1.02.13.020	Temperature Probe - PT100	2
3	2.1.1.06.0077	Cylinder Assembly	1
4	3.2.01.01.014	Auxiliary Compressor	1
5	3.2.01.01.014-1	Start Component - Auxiliary Compressor	1
6	3.2.05.01.002	Capillary Tube	1
7	3.2.04.05.001	Filter Drier - Hopper	1
8	3.2.04.07.001	Suction Accumulator	1
9	3.2.01.04.028	Start Component - Primary Compressor	1
10	3.2.01.02.063	Primary Compressor	1
11	3.2.04.06.005	High Pressure Switch	1
12	3.2.04.05.013	Copper Strainer Filter	1
13	3.2.04.01.033-0	Thermal Expansion Valve - #0	2
14	3.2.04.08.006	Liquid Receiver	1
15	3.2.02.01.005	Main Condenser	1
16	3.2.03.03.004-2	Capacitor - Fan Motor	1
17	3.2.03.03.004	Main Fan Motor	1
18	2.1.3.50.0002	Fan Shroud	1
19	Page 7	Control Box	1
20	Page 7	Electrical Box	1
21	3.2.03.01.005	Auxiliary Fan Motor	1
22	3.2.02.01.039	Auxiliary Condenser	1
23	3.2.04.05.002	Filter Drier - Cylinder	1
24	3.1.02.22.009	Run Capacitor	1
25	3.1.02.22.064	Starting Capacitor	1
26	3.3.01.06.006	Motor - Beater	1
27	3.3.04.01.007	Bushing - 1210-16	1
28	3.3.04.02.004	Pulley - Beater Motor	1
29	3.3.02.01.012	Gear Box	1
30	3.3.03.01.008	Belt - Motor to Beater	2
31	3.3.04.01.015	Bushing - 1210-20	1
32	3.3.04.02.009	Pulley - Gear Box	1

3. Dispensing Door and Beater

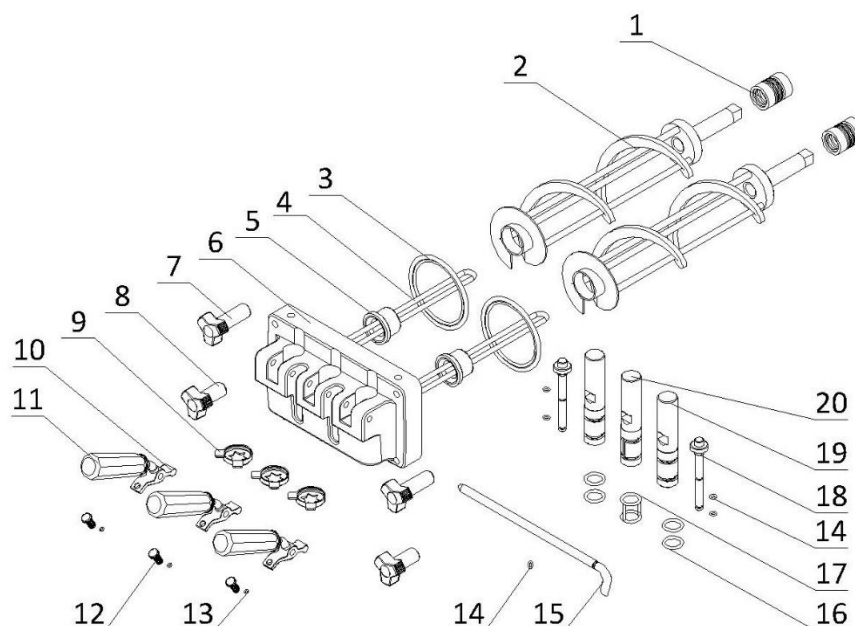


Item	Part Number	Description	Qty.
1	3.4.07.05.001	Gasket - Beater	2
2	2.1.1.09.0001	Stainless Steel Beater	2
3	3.4.08.02.007	Door Gasket	2
4	2.1.1.11.0017	Beater Rod	2
5	3.4.01.03.013	Beater Guide	2
6	2.1.3.14.0031	Dispensing Door	1
7	3.4.05.02.010	Hand Screw - Long	2
8	3.4.05.02.008	Hand Screw - Short	2
9	3.4.05.03.002	Design Cap	3
10	2.1.3.26.0001	Seat - Handle	3
11	3.4.05.01.001	Handle - Dispensing	3
12	3.6.39.009	Adjustment Screw - Handle	3
13	3.4.08.01.012	O-Ring - 3x1.5	3
14	3.4.08.01.013	O-Ring - 5.2x1.9	5
15	2.1.3.27.0029	Retention Pin - Handle	1
16	3.4.08.01.011	O-Ring - 19x3	4
17	3.4.08.01.019	H-Ring - 19x3x2	1
18	2.1.3.02.0015	Prime Plug	2
19	2.1.3.01.0009	Draw Valve - Side	2
20	2.1.3.02.0003	Draw Valve - Middle	1

4. Draw Switch and Front Control Panel

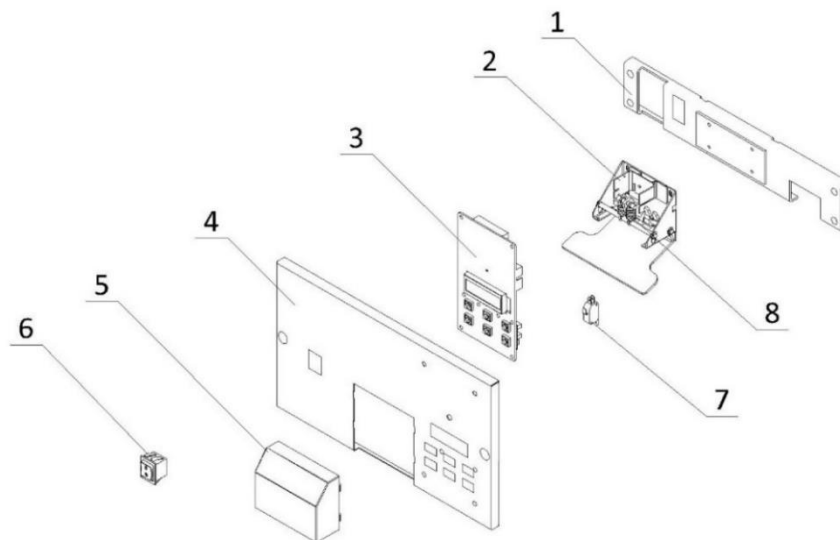


Item	Part Number	Description	Qty.
1	2.2.4.24.0003	Bracket - Draw Switch Assembly	1
2	2.1.1.19.0003	Draw Switch Assembly	1
3	2.2.1.01.0039	Control Board	1
4	2.3.4.08.001	Panel - Upper Front	1
5	3.4.07.07.004	Switch Cover	1
6	3.1.03.03.003	Power Switch	1
7	3.1.03.01.004	Draw Switch	1
8	3.6.02.007	Spring - Draw Switch	1

5. Control Box

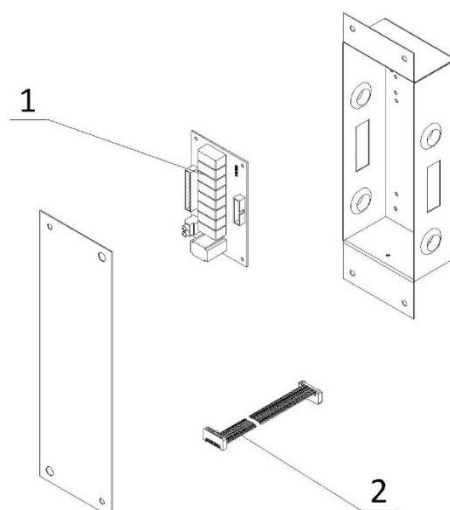

Item	Part Number	Description	Qty.
1	2.2.1.01.0007	Power Board	1
2	3.1.04.01.003	Ribbon Cable	1

6. Electrical Box

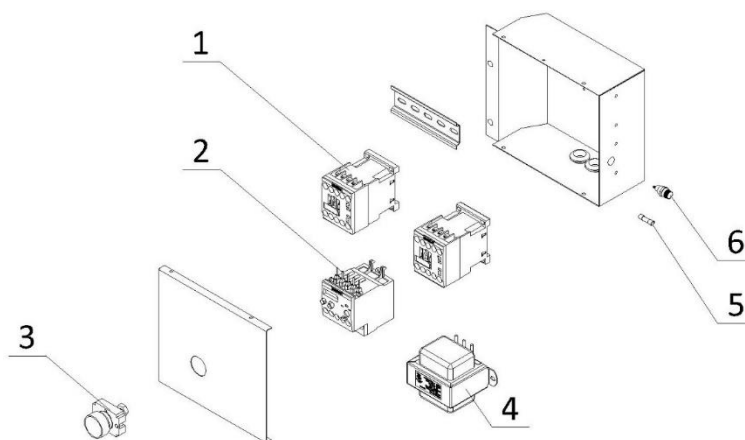

Item	Part Number	Description	Qty.
1	3.1.01.01.010	Contactor	2
2	3.1.01.02.012	Thermal Overload Relay	1
3	3.1.03.04.002	Reset Button	1
4	3.1.01.04.002	Transformer	1
5	3.1.02.08.003	Fuse	1
6	3.1.02.08.012	Seat - Fuse	1