



1. External Parts

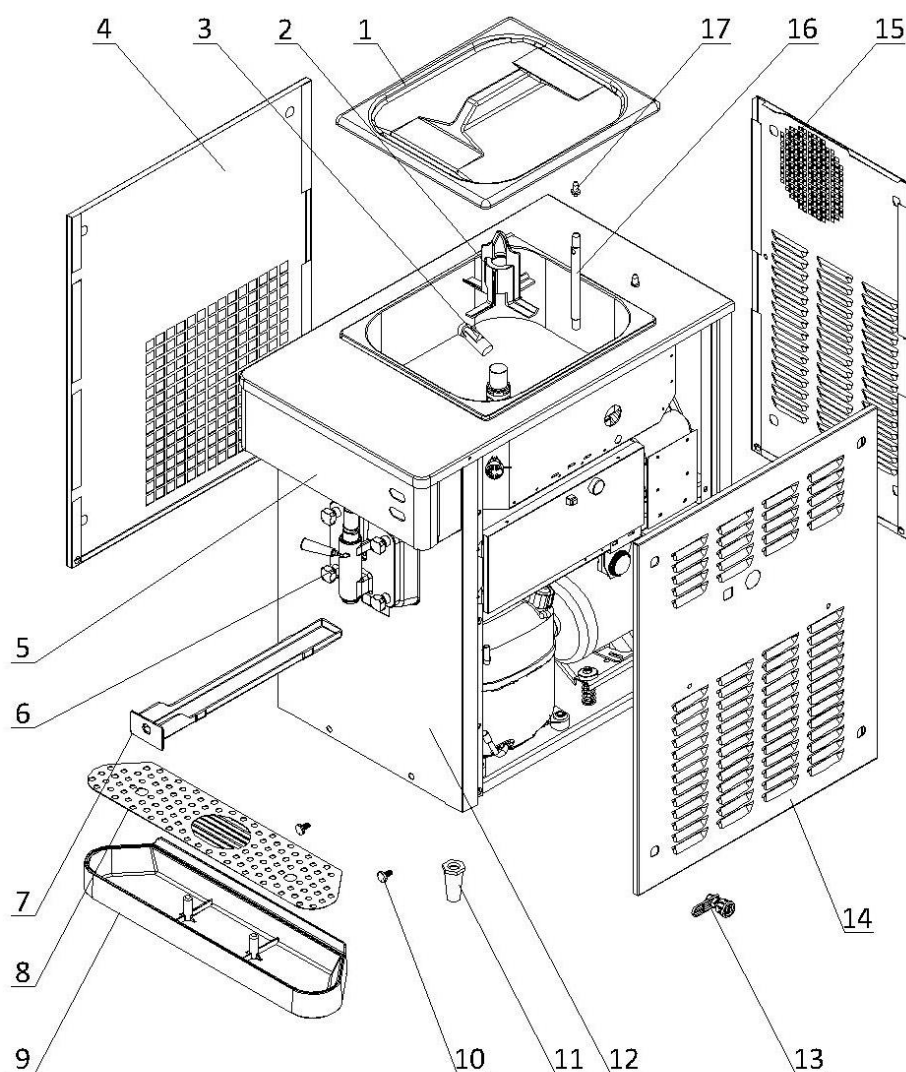

1. External Parts

Item	Part Number	Description	Qty.
1	3.4.03.02.001	Hopper Lid	1
2	Page 7	Hopper Agitator	1
3	3.1.03.04.009	Mix Low Sensor	1
4	2.3.4.28.054	Panel - Left	1
5	Page 6	Draw Switch and Front Control Panel	1
6	Page 5	Dispensing Door and Beater	1
7	3.4.04.02.001	Internal Drip Tray	1
8	2.3.4.45.092	Splash Shield - Front Drip Tray	1
9	3.4.04.01.010	Front Drip Tray	1
10	3.6.39.004	Drip Tray Mounting Bolt	2
11	3.3.05.03.005	Leg	4
12	2.3.4.26.054	Panel - Lower Front	1
13	8.1.07.001	Panel Lock Assembly	12
14	2.3.4.30.049	Panel - Right	1
15	2.3.4.23.071	Panel - Rear	1
16	2.1.3.39.0006	Air Tube	1
17	3.6.39.011	Hopper Lid Holder	2


2. Internal Parts

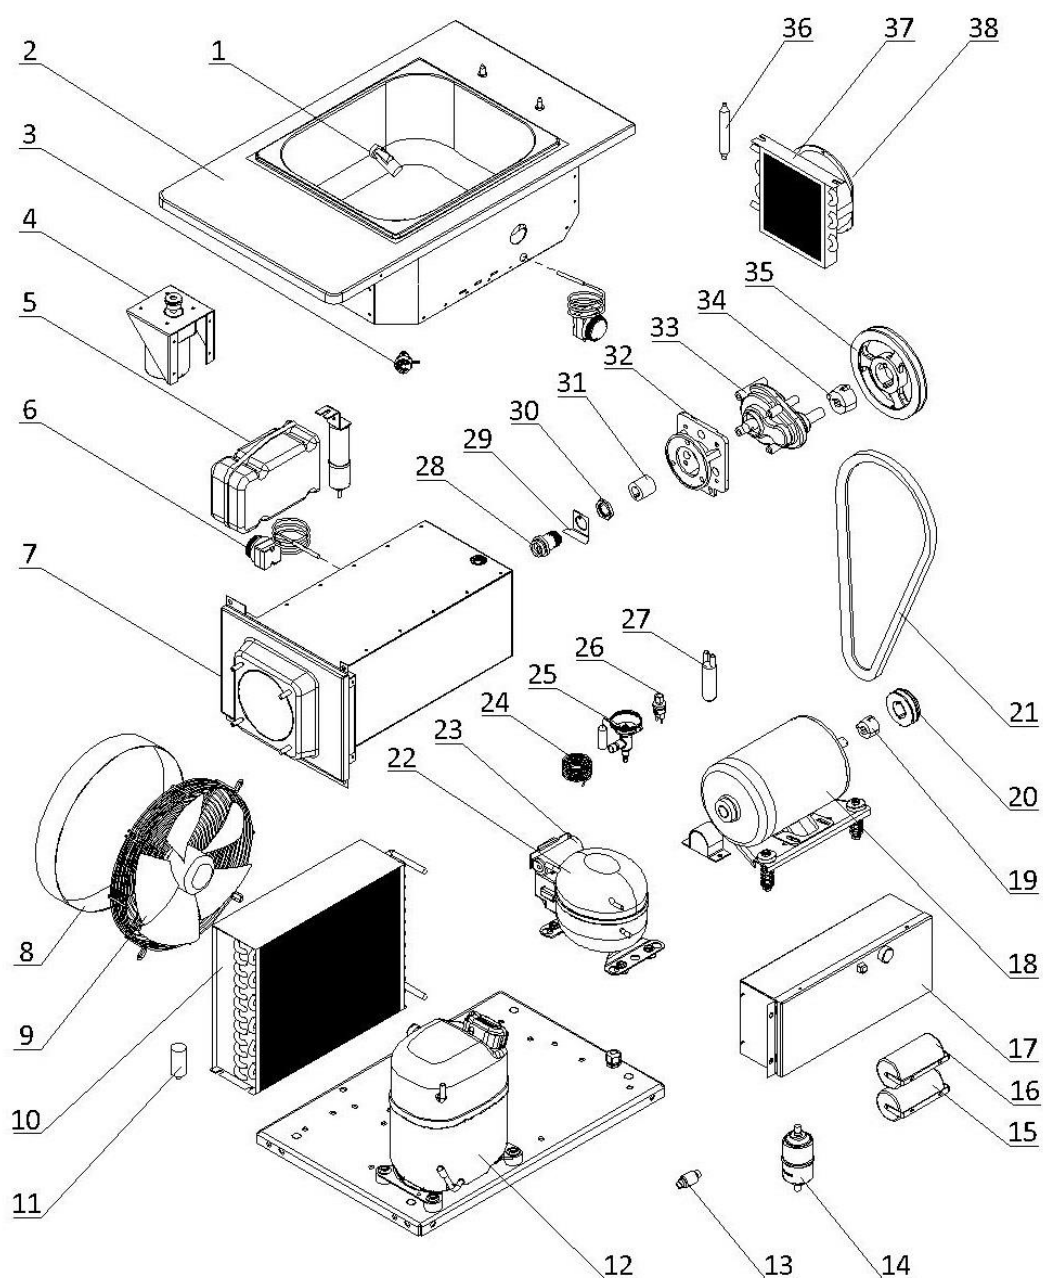

2. Internal Parts


Item	Part Number	Description	Qty.
1	3.1.03.04.009	Mix Low Sensor	1
2	2.1.1.03.0027	Hopper Assembly	1
3	3.1.02.15.003	Alarm - Low Mix	1
4	Page 7	Agitator Motor	1
5	3.2.01.04.019	Start Component - Primary Compressor	1
6	3.1.01.07.003	Thermostat	2
7	2.1.1.06.0142	Cylinder Assembly	1
8	2.1.3.50.0001	Fan Shroud	1
9	3.2.03.04.005	Main Fan Motor	1
10	3.2.02.01.006	Main Condenser	1
11	3.2.03.04.005-2	Capacitor - Fan Motor	1
12	3.2.01.02.040	Primary Compressor	1
13	3.2.04.05.013	Copper Strainer Filter	1
14	3.2.04.05.002	Filter Drier - Cylinder	1
15	3.1.02.22.062	Capacitor - Start	1
16	3.1.02.22.009	Capacitor - Running	1
17	Page 8	Electrical Box	1
18	3.3.01.03.003	Motor - Beater	1
19	3.3.04.01.005	Bushing - 1008-16	1
20	3.3.04.02.012	Pulley - SPA63-1-1008	1
21	3.3.03.01.022	Belt - V-XPA850	1
22	3.2.01.01.005	Auxiliary Compressor	1
23	3.2.01.01.005-1	Start Component - Auxiliary Compressor	1
24	3.2.05.01.003	Capillary Tube	1
25	3.2.04.01.013	Thermal Expansion Valve	1
26	3.2.04.06.005	High Pressure Switch	1
27	3.2.04.07.001	Suction Accumulator	1
28	3.3.02.02.002	Rear Shell Bearing	1
29	2.3.6.04.030	Lock Plate - Rear Shell Bearing	1
30	3.3.02.02.011	Nut - Rear Shell Bearing	1
31	3.3.02.04.009	Coupling Drive	1
32	2.1.3.15.0003	Bracket - Gear Box	1
33	3.3.02.01.024	Gear Box - Beater	1
34	3.3.04.01.008	Bushing - 1610-16	1
35	3.3.04.02.006	Pulley - SPA112-1-1610	1
36	3.2.04.05.001	Filter Drier - Hopper	1
37	3.2.02.01.001	Auxiliary Condenser	1
38	3.2.03.01.005	Auxiliary Fan Motor	1

3. Dispensing Door and Beater

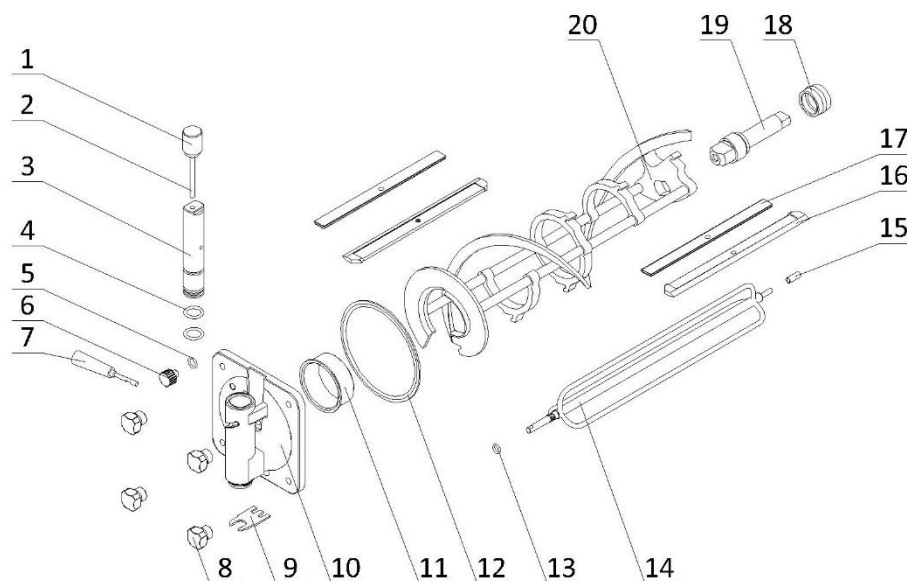


Item	Part Number	Description	Qty.
1	2.1.3.36.0004	Weight - Draw Valve	1
2	2.1.3.36.0003	Pin - Draw Valve	1
3	2.1.3.01.0006	Draw Valve	1
4	3.4.08.01.036	O-Ring - 19x3.55	2
5	3.4.08.01.008	O-Ring - 11.5x2.5	2
6	3.4.07.08.001	Prime Plug	1
7	3.4.05.01.002	Handle - Dispensing	1
8	2.1.3.32.0004	Hand Screw - Dispensing	4
9	2.1.4.04.014	Ice Buster - Dispensing	1
10	2.1.3.14.0006	Dispensing Door	1
11	3.4.01.03.003	Beater Guide	1
12	3.4.08.02.012	Door Gasket	1
13	3.4.08.01.017	O-Ring - 11x2.4	1
14	2.1.1.31.0001	Torque Rotor	1
15	3.4.01.03.004	Torque Guide	1
16	3.4.02.01.003	Plastic - Scraper Blade	2
17	2.3.4.04.003	Clip - Scraper Blade	2
18	3.4.07.05.002	Gasket - Drive Shaft	1
19	2.1.3.25.0003	Drive Shaft	1
20	2.1.1.10.0004	Flexible Blade Beater - V1	1

4. Draw Switch and Front Control Panel

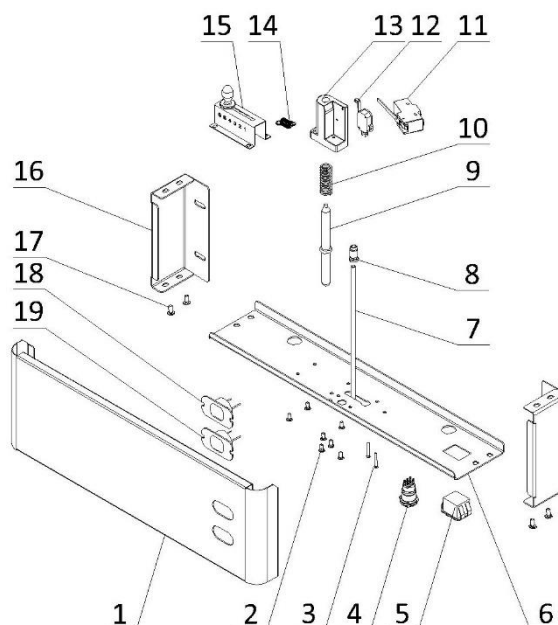


Item	Part Number	Description	Qty.
1	2.3.4.36.045	Panel - Overhead Front	1
2	3.6.22.028	Screw - M4×12	7
3	3.6.22.027	Screw - M4×30	2
4	3.1.03.04.039	Button Switch	1
5	3.1.03.03.002	Power Switch	1
6	2.3.4.39.071	Panel - Overhead Bottom	1
7	2.1.4.04.025	Torque Arm	1
8	2.1.4.04.024	Bracket - Spring	1
9	2.1.3.50.0088	Shaft - Draw Switch	1
10	3.6.03.012	Spring - Shaft - Draw Switch	1
11	3.1.03.02.002	Micro Switch - Torque Lever	1
12	3.1.03.01.002	Micro Switch	1
13	3.4.07.06.008	Bracket - Micro Switch&Shaft&Spring	1
14	3.6.02.003	Spring - Viscosity	1
15	920.1.03.0004	Control Levers - Viscosity Adjustment	1
16	2.3.4.37.047	Panel - Overhead Side	2
17	3.6.22.010	Screw - M5x10	4
18	3.1.02.14.013	LED Light - Red	1
19	3.1.02.14.011	LED Light - Blue	1

5. Hopper Agitator

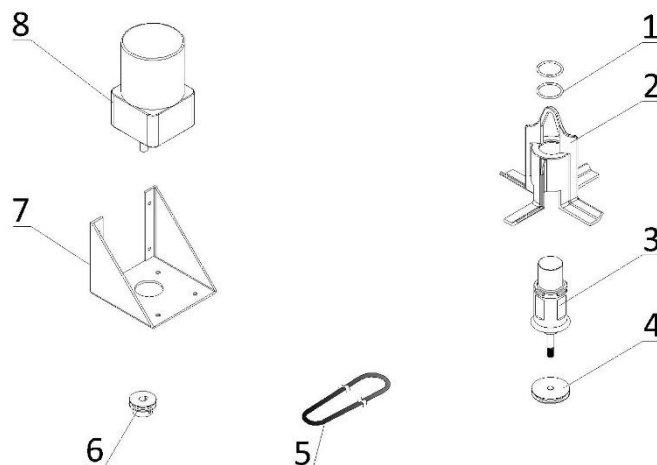

Item	Part Number	Description	Qty.
1	3.4.08.01.034	O-Ring - 31×2	2
2	2.1.1.23.0005	Blade - Hopper Agitator	1
3	2.1.1.12.0003	Agitator Assembly	1
4	2.1.4.02.017	Pulley - Hopper Agitator - Single	1
5	2.1.4.08.0068	Belt - Hopper Agitator - 430mm	1
6	3.3.04.04.008	Pulley - Hopper Agitator - Drive	1
7	2.3.4.45.007	Bracket - Agitator Motor	1
8	3.3.01.01.006	Motor - Agitator	1

6. Electrical Box

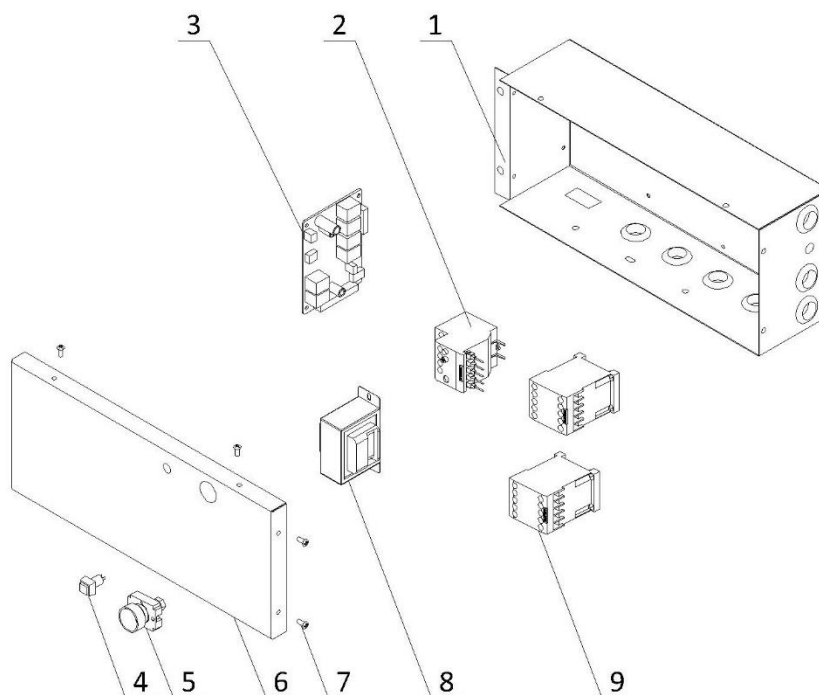

Item	Part Number	Description	Qty.
1	2.2.4.17.0047	Electrical Box	1
2	3.1.01.02.010	Thermal Overload Relay	1
3	2.2.1.01.0038	Control Board	1
4	3.1.03.04.003	Switch - Low Mix Alarm	1
5	3.1.03.04.002	Reset Button - Thermal Overload	1
6	2.2.4.20.0043	Cover - Electrical Box	1
7	3.6.06.072	Screw - M4×10	4
8	3.1.01.04.002	Transformer	1
9	3.1.01.01.010	Contactor	2